


## KIT Studio - Restart Guide

This document is designed to help when the KIT either goes into sleep mode or becomes disconnected from the laptop while the USB-C is plugged in. Usually, the FS Golf game is still running, but the KIT is not showing Game Mode and tracking.

1. Unplug the **USB-C** cable from the **KIT**. Unplug the **USB-C** from the **Laptop**.
2. Power down the **KIT**.
3. On the **Laptop**, exit the **FS Golf** app back to the **FS Launcher Games Library**.
4. **Power** on the **KIT**. Wait until the **KIT** is displaying the data points and battery.
5. Plug the **USB-C** cable into the side of the **laptop**.
6. Then plug the **USB-C** back into the power port on the side of the **KIT**.
7. There will be a **USB** symbol that displays on the **KIT** letting you know they are connected.
8. On the **laptop**, select the **FS Golf Kit** icon.
9. Watch the **KIT** at this time as it will light up **Green 1x** and the display screen will change to the **Full Swing Kit Game Mode**. Once connected there will be a **Green Checkmark** in the top right corner next to the **USB** symbol.
10. Place the **KIT** at the end of the **Turf Extension** if not already.
11. **Begin Playing!**

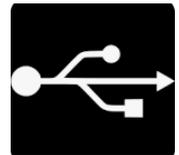

**NOTE: Wi-Fi** to the laptop is crucial for these two technologies to connect; ensure you have good signal when operating the **Full Swing KIT Studio**.